



Button	Function
	Power ON / Stand by
[F4]	Open the system default home page within the web browser
[F5]	Open the system default email client
[F6]	Open the system default media player
[F7]	Play previous media
[F8]	Play or Pause media
[F9]	Play next media
[F10]	Sound ON / OFF - The screen will display a MUTE logo when the sound is OFF.
[F11]	Decrease the volume
[F12]	Increase the volume
Note: Other key functions are the same as those of a standard keyboard.	

Mouse Function	
	Right button of the mouse
	Cursor key. Hold down this key and the cursor will move with the movement of the remote control. Release the key and the cursor position will be locked.
	Left button of the mouse