

Button	Function
POWER	ON / Stand-By
SOUND	Switch to Sound Mode
NICAM	Enter or Exit the On-Screen DTV Menu within DTV
MUTE	Sound ON / OFF - The screen will display a MUTE logo when the sound is OFF
0-9	Manual Channel Selection
INPUT	Change Source Mode
PIC	Switch to Picture Mode
MENU	Enter or Exit the On-Screen Menu
↑ / ↓	Up / Down selector for the On-Screen Menu
← / →	Left / Right selector for the On-Screen Menu
ENTER	Confirm selector for the On-Screen Menu
EXIT	Exit the On-Screen Menu
RETURN	Return to Previous Channel
INFO	Display the channel name or any other information that is present on the specific signal source
VOL+	Increase the volume
VOL-	Decrease the volume
CH+	Move up a channel
CH-	Move down a channel
FAV	Display your favorite channel list
EPG	Run the electronic program guide list within DTV
TEXT	Open Teletext
REVEAL	Reveal Hidden Text in Teletext
HOLD	Hold a page in Teletext
LIST	Enter List Mode in Teletext
INDEX	Enter Index Mode in Teletext
SUBPAGE	Reveal Subpage in Teletext
SIZE	Switch aspect ratio of the displayed picture
AUDIO	Enter Audio Mode in Teletext
SUBTITLE	Language Selection
COLOURED BUTTONS	Teletext Selector

