

## **IR Link In & Out**

IR Links enable control of external equipment via the IR sensor on the Television, and control of the Television from a remote location.

## **IR Link IN**

The IR Link IN is a 3.5mm stereo jack socket. This socket allows an auxiliary IR sensor receiver (included) to be connected to the Television to enable remote control of the Television from a different point other than the front of the Television.





## **IR Link OUT**



The IR Link OUT is a 3.5mm mono jack socket. The IR signal sensed by the Television is outputted from this socket to an IR emitter (included). This will enable the remote control of external equipment, such as a DVD player from the Television itself.

