



1. Create an opening within the chosen area of the wall. Please see the table below for specific recess dimensions that are relevant for your product.
2. Place the in-wall bracket into the recess and use the pilot holes to drill into the wall. Place the raw plugs into the holes that have been drilled and fix the bracket into position.
3. Offer the television up to the bracket that is fixed within the wall. Line up the side brackets (pre-assembled to television) with the protruding screws within the in-wall bracket and simply push the television into situ.

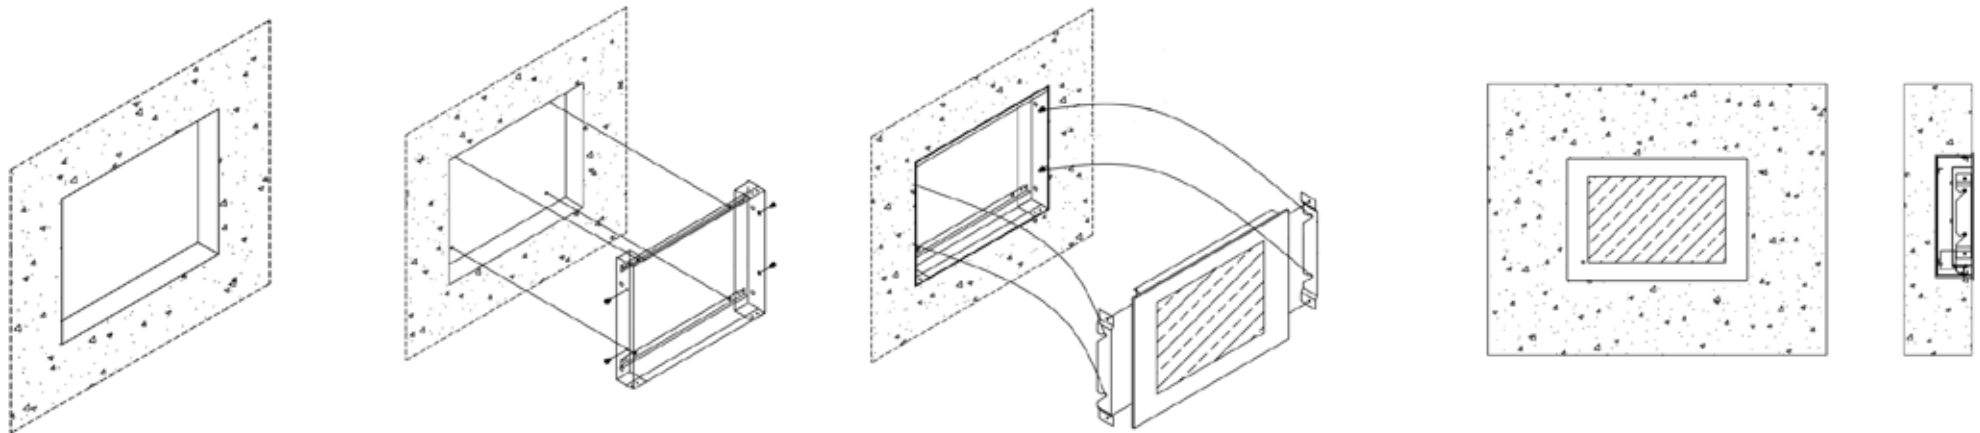

Installation Data									
Product	15"	19"	22"	27"	32"	42"	46"	55"	65"
Unit Size (W x H x D)	493 x 325 x 56 (mm)	536 x 360 x 62 (mm)	597.5 x 406 x 61.5 (mm)	736 x 449 x 68 (mm)	842 x 558 x 84 (mm)	1122 x 720 x 86 (mm)	1219 x 767 x 78 (mm)	1396 x 874 x 95 (mm)	1650 x 1025 x 87 (mm)
Recess Dimensions (W x H x D)	475 x 310 x 90 (mm)	490 x 345 x 100 (mm)	560 x 390 x 95 (mm)	720 x 435 x 110 (mm)	810 x 545 x 125 (mm)	1105 x 705 x 110 (mm)	1200 x 750 x 105 (mm)	1380 x 855 x 110 (mm)	1625 x 1000 x 110 (mm)

1. Attach the female section of the VESA bracket to the wall with the screws provided.
2. Attach the male section of the VESA bracket to the back of the television with the provided screws.
3. Simply offer the television up to the wall and slide the two pieces of the bracket into one another.

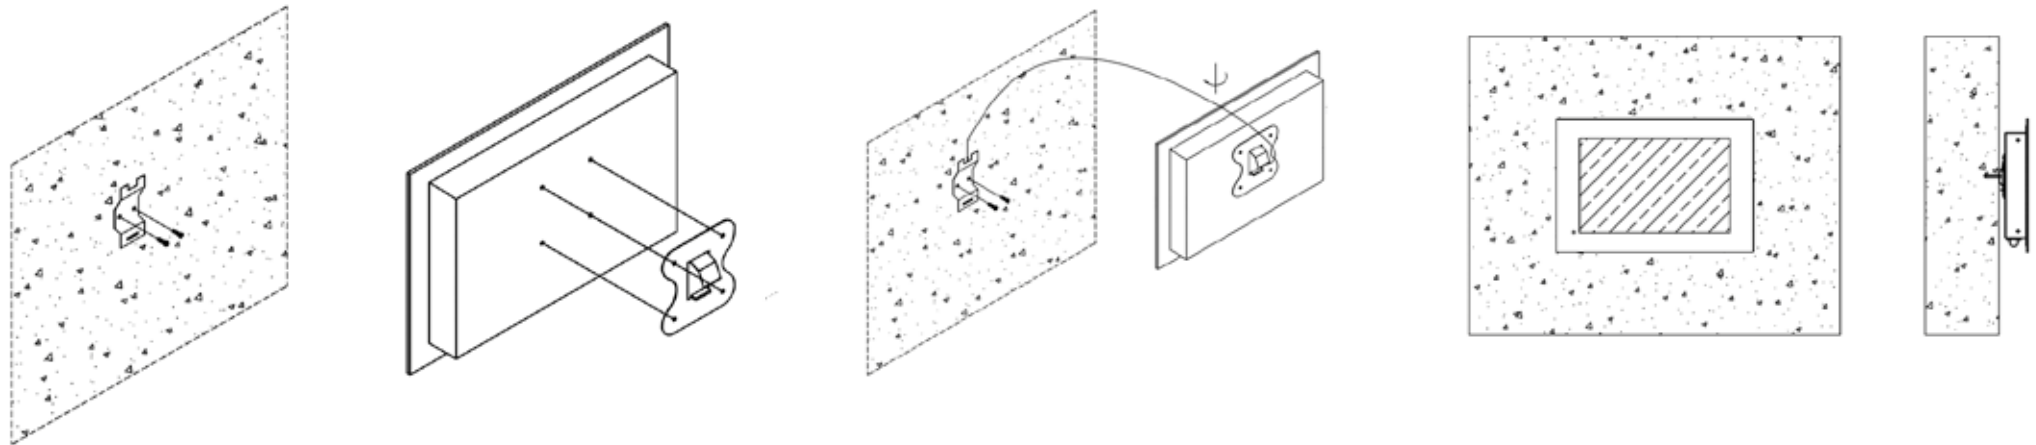

Installation Data									
Product	15"	19"	22"	27"	32"	42"	46"	55"	65"
Wall Bracket Compliance	VESA 100 x 100mm	VESA 100 x 100mm	VESA 100 x 100mm	VESA 200 x 100mm	VESA 200 x 200mm	VESA 200 x 200mm	VESA 200 x 200mm	VESA 400 x 400mm	VESA 400 x 400mm